

AUFBAUANLEITUNG

INSTRUCTIONS MANUAL


LA INSTRUCCIÓN

INTRODUZIONE

TALIMATLAR

INSTRUÇÕES

تاميلعت

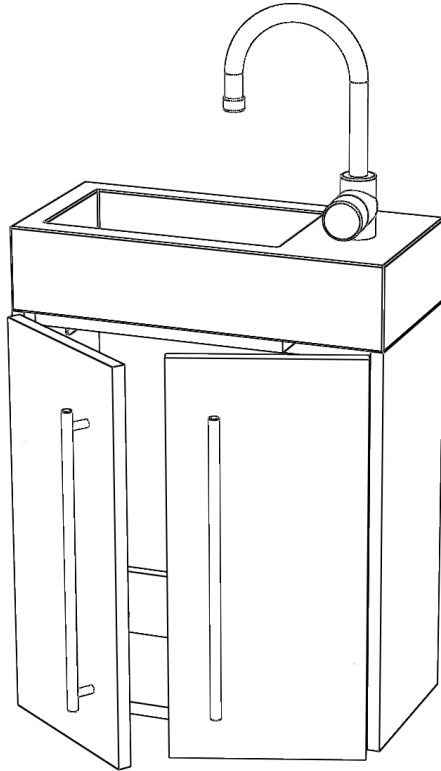


16x
WA 020




16x
WA 021




26x
WA 022




4x
WA 031




4x
WA 023



2x
WA 024



2x
WA 025




2x
WA 026



2x
WA 027




2x
WA 028

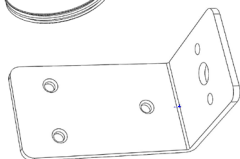



1x
IX 100

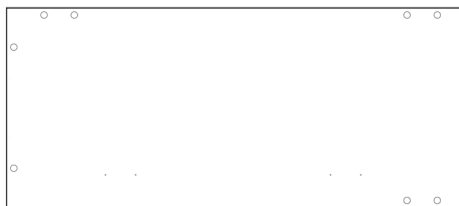

1x
IX 101




1x
IX 102




2x
IX 103



1x
IX 104

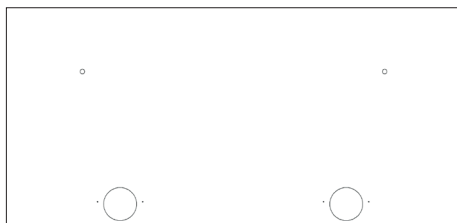


2x
IX 105





2x
IX 106

16x

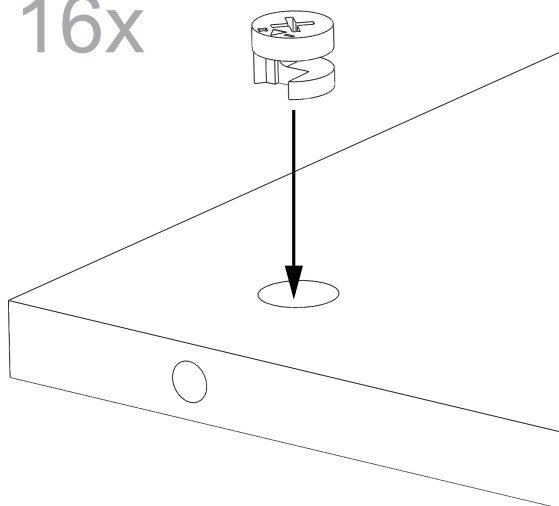




!

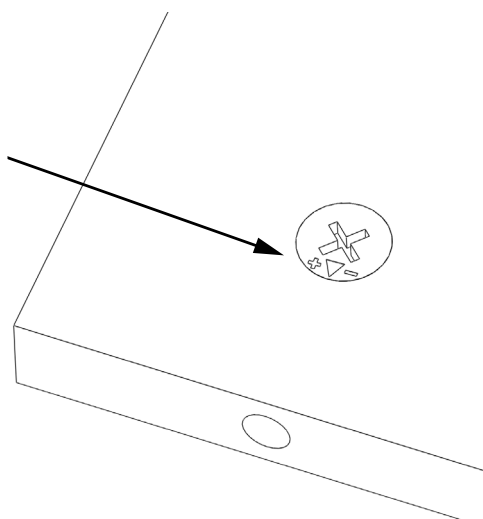



16x



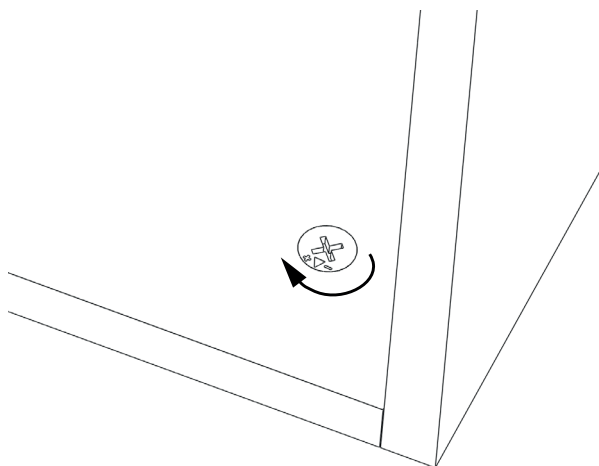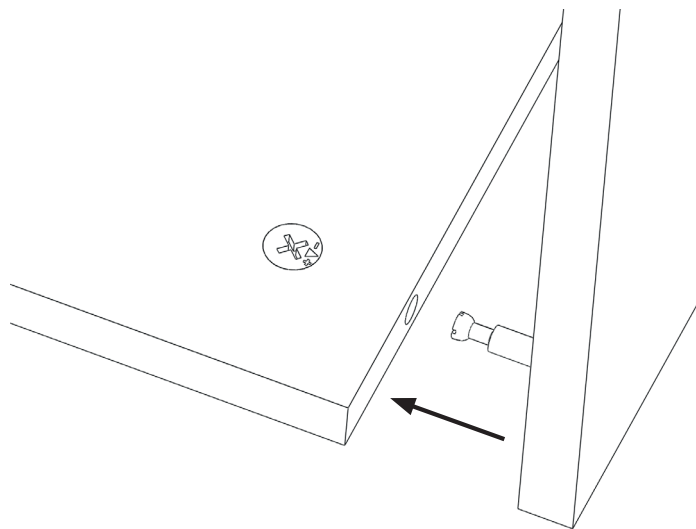

ZUSAMMENBAU

ASSEMBLY


ASSEMBLAGE


ASAMBLEA

MONTAJ

MONTAGEM

تجميع

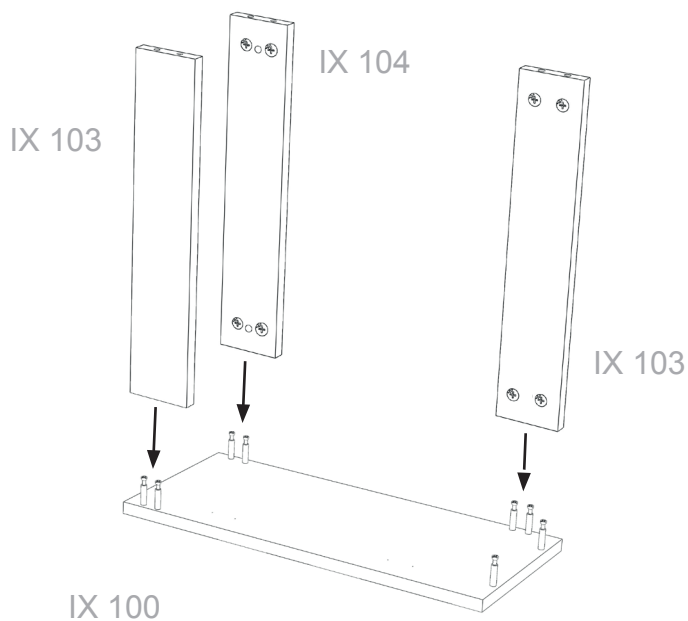

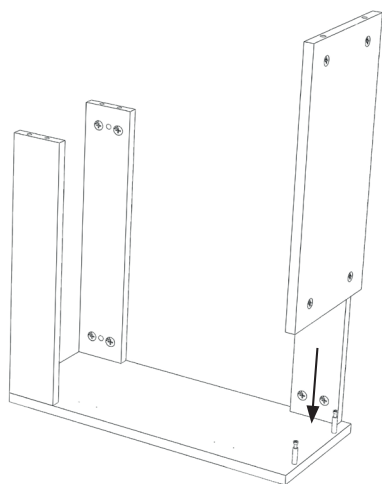


IX 102




2/18


IX 101

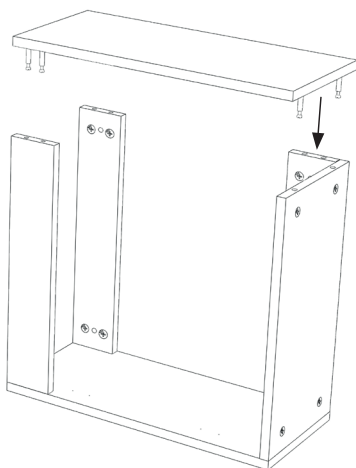


3/18





2x
WA 028

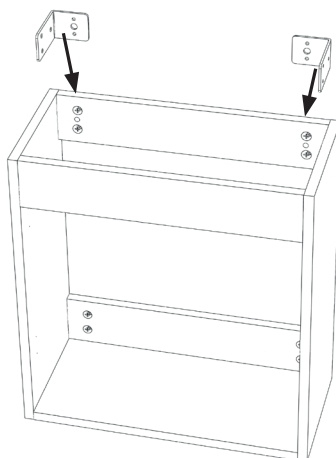


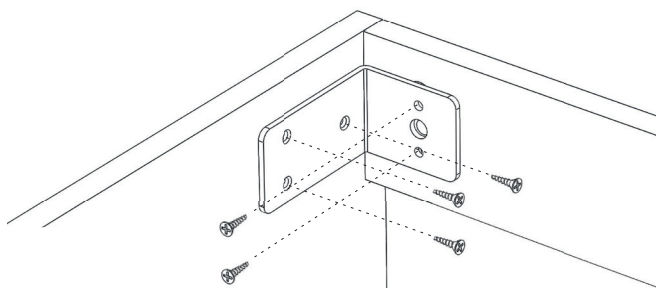


5/18



5x
WA 022

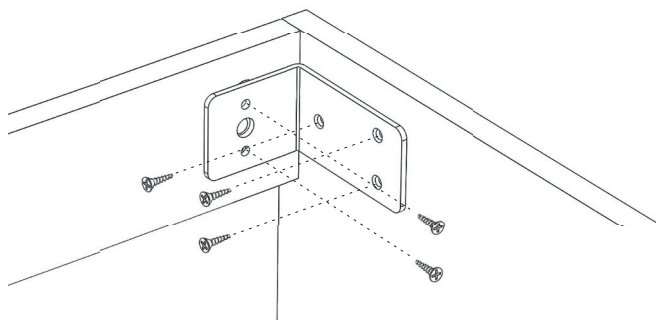

6/18



5x
WA 022

WANDMONTAGE

WALL MOUNT




MONTAGE AU MUR

DE MONTAJE EN PARED


DUVARA MONTAJ


PAREDE MONTAGEM

لېږ رادج




4x
WA 025

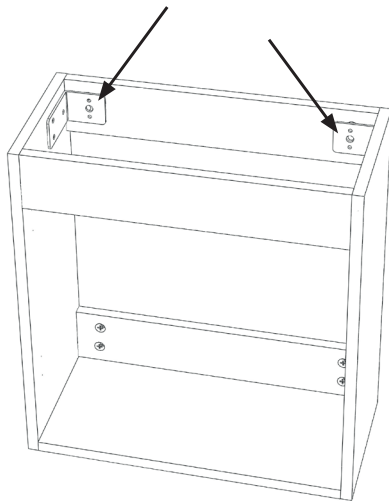


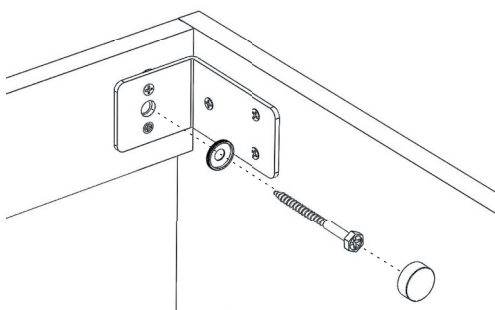

7/18

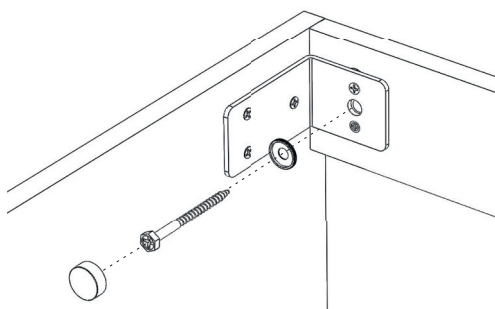

8/18




2x
WA 024



2x
WA 026



2x
WA 027




SILIKON


SILICONE

SILICONA


نوكيليس

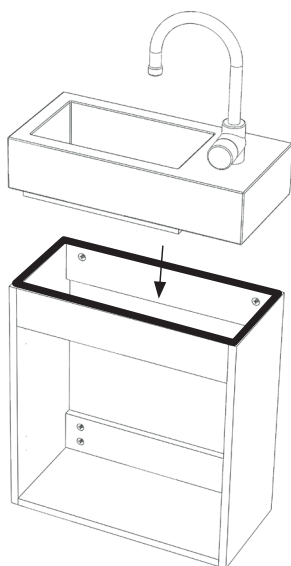



9/18

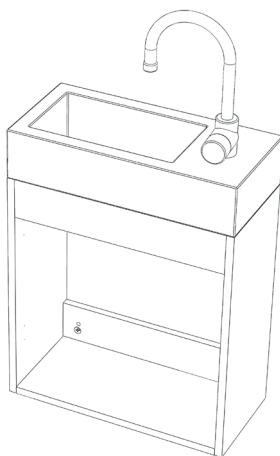



10/18

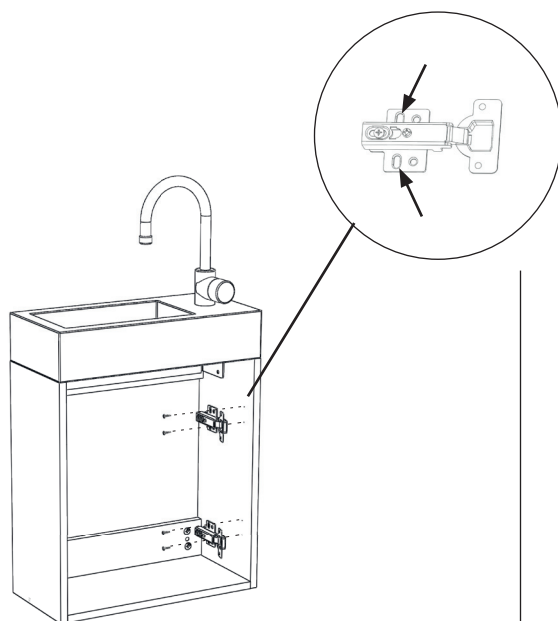


11/18

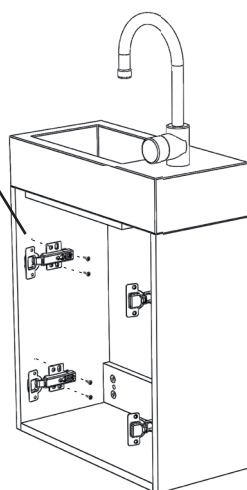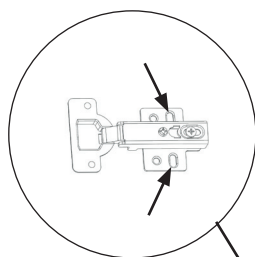


12/18



4x
WA 031




8x
WA 022



4x
WA 023

IX 106


IX 105

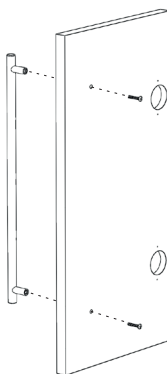


13/18

IX 105



IX 106

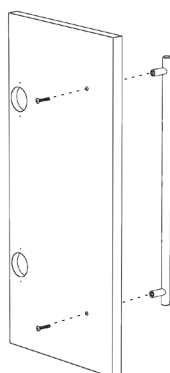


14/18

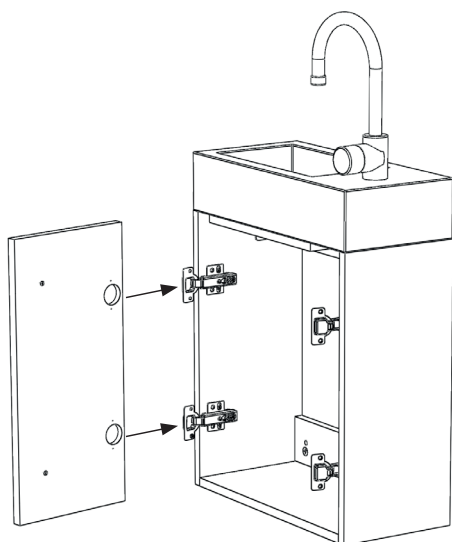


15/18

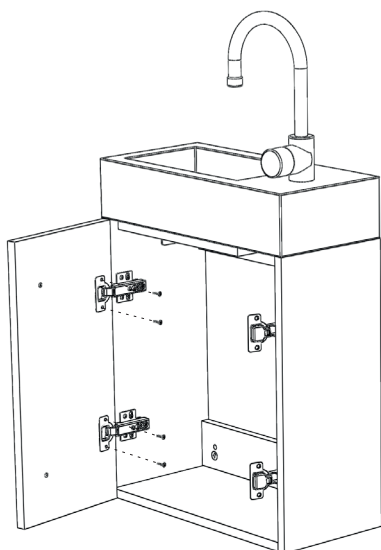


16/18




4x
WA 022

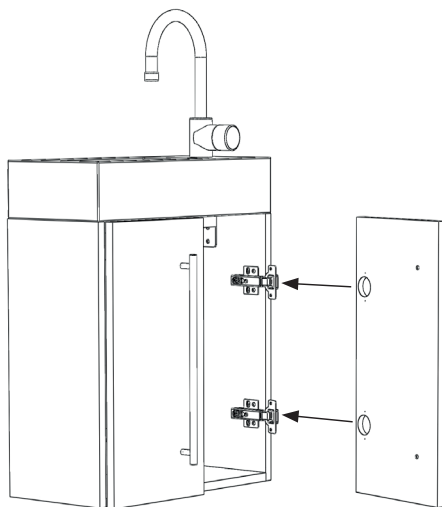

17/18



4x
WA 022

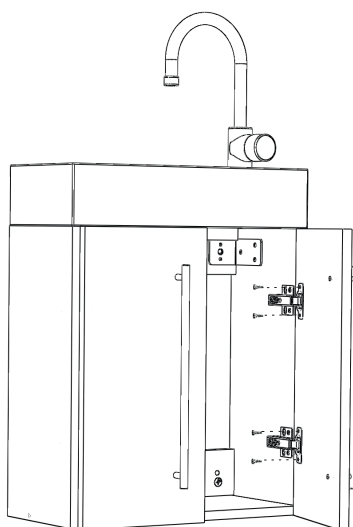

18/18

