

# **GALAXY 900 / INFINITY 850**

**A134 / A138**

**AUFBAUANLEITUNG**

**INSTRUCTIONS MANUAL**

**LA INSTRUCCIÓN**

**INTRODUZIONE**

**TALIMATLAR**

**INSTRUÇÕES**

**تاميلعت**






41x  
WA 020




41x  
WA 021




26x  
WA 022




4x  
WA 023



2x  
WA 024




2x  
WA 025




2x  
WA 026



2x  
WA 027



2x  
WA 028

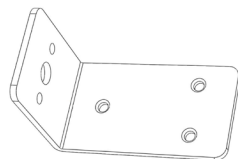

6x  
WA 030






1x  
WA 001




1x  
WA 002

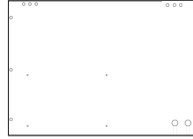

1x  
WA 003



1x  
WA 004



2x  
WA 005




1x  
WA 006



2x  
WA 007



2x  
WA 008



1x  
WA 009




2x  
WA 010




1x  
WA 011



1x  
WA 012



1x  
WA 013



1x  
WA 014




1x  
WA 015




1x  
WA 016




1x  
WA 017



2x  
WA 018





2x  
WA 019 L





2x  
WA 020 R



41x

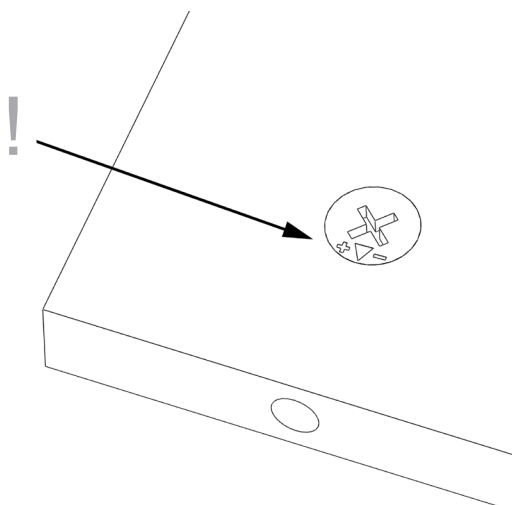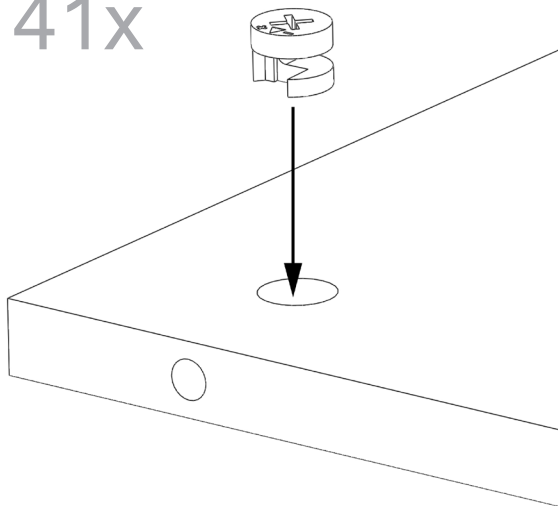



41x

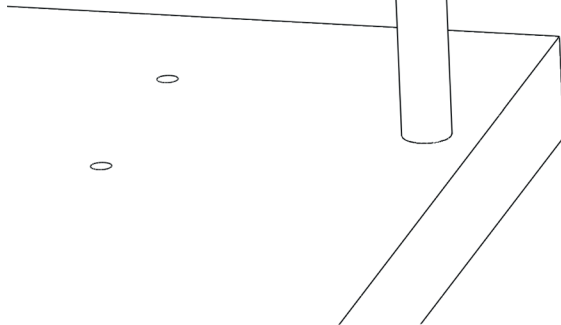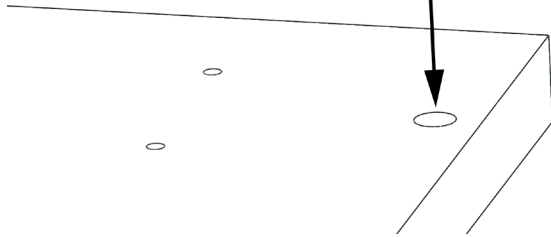

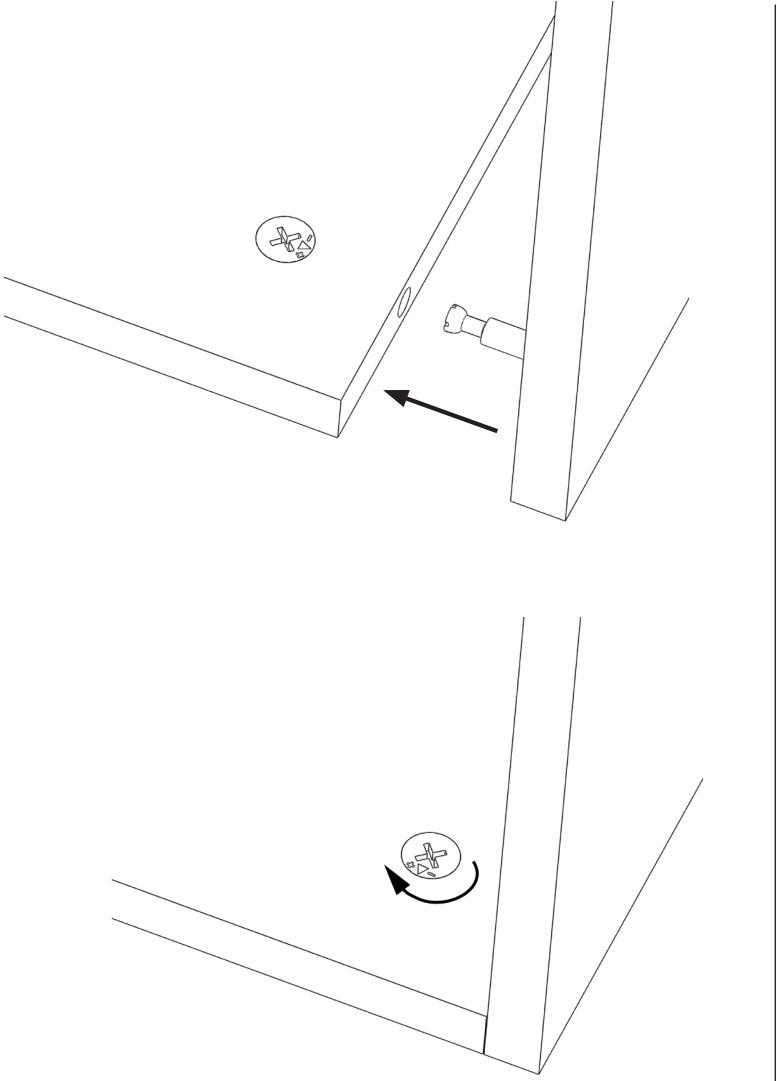

ZUSAMMENBAU

ASSEMBLY


ASSEMBLAGE

ASAMBLEA

MONTAJ

MONTAGEM

تجميع




4x  
WA 030

WA 001


WA 004

1/30

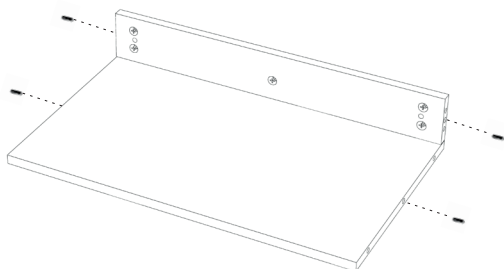

2/30



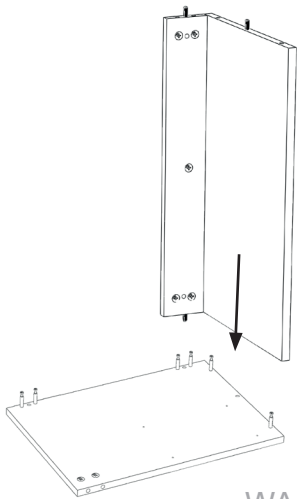


WA 002

3/30



WA 005

4/30

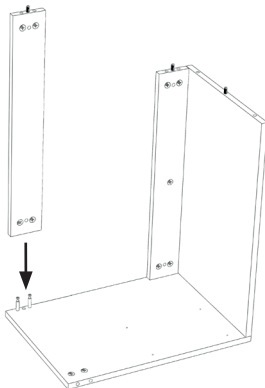


5/30




2x  
WA 030


WA 003

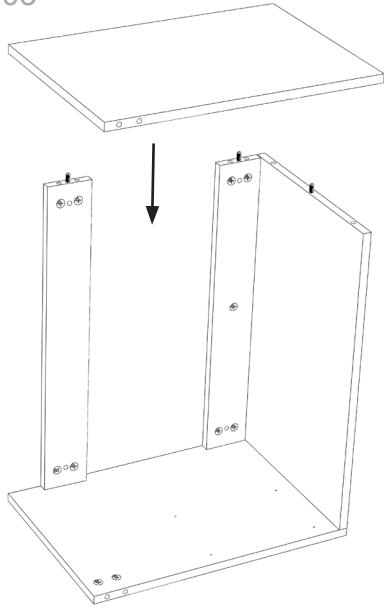


6/30





WA 006

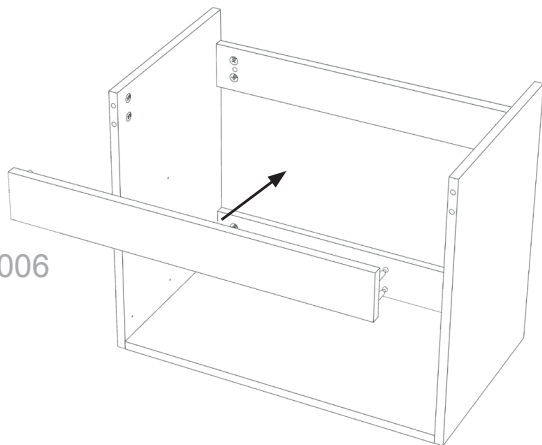



7/30

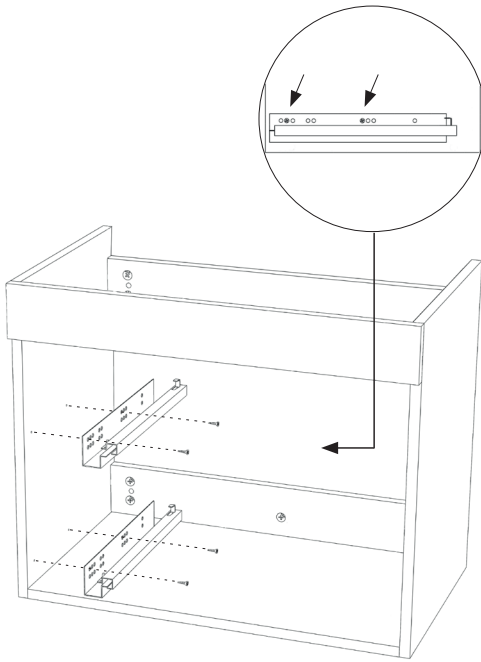


8/30

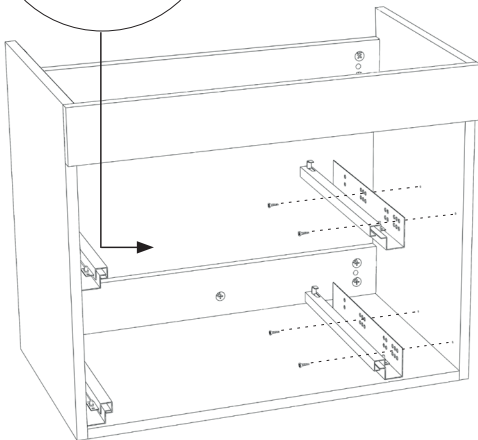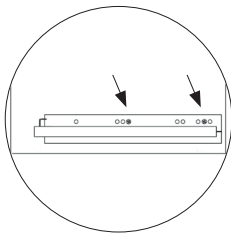


9/30




8x  
WA 022



2x  
WA 019 L




2x  
WA 020 R



4x  
WA 023


2x

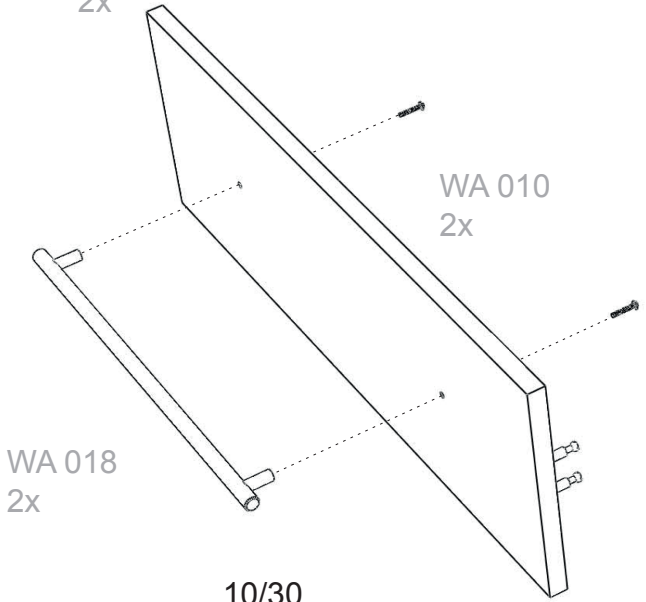


WA 010  
2x

WA 018  
2x


10/30

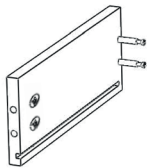

WA 007

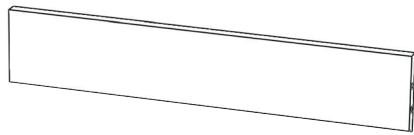


WA 009





WA 008

11/30

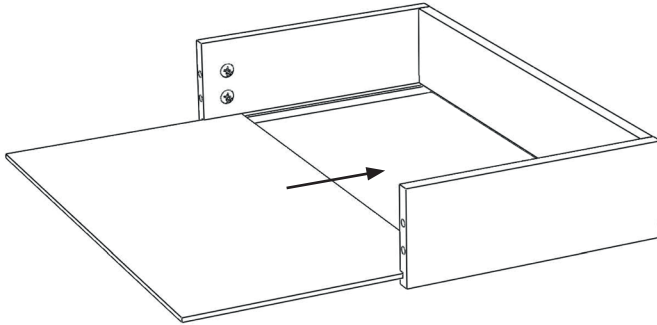


WA 014



12/30

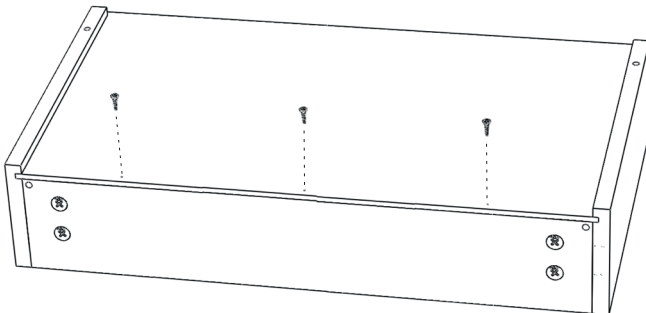

13/30




3x  
WA 022

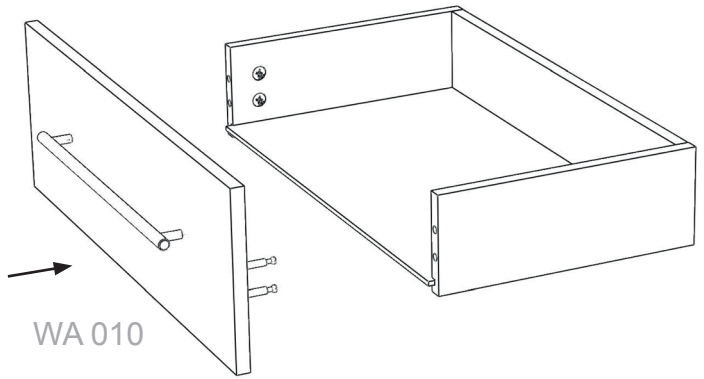



WA 010


14/30

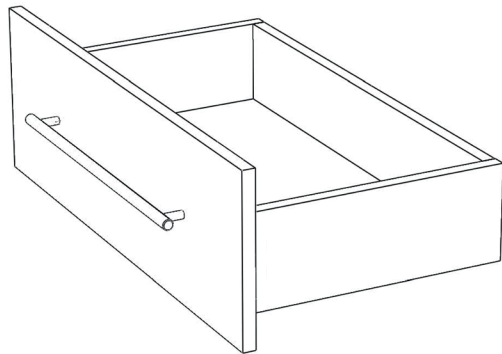

WA 007

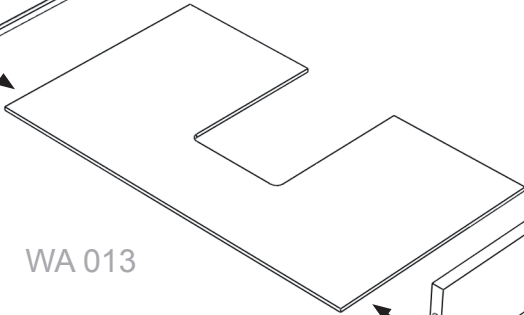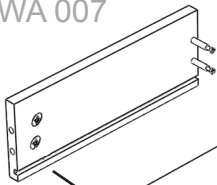




WA 013

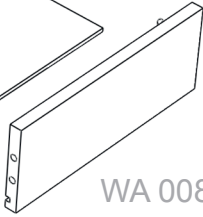


WA 008

15/30

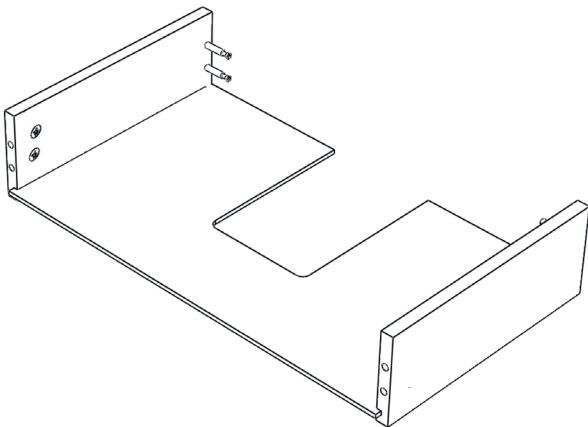

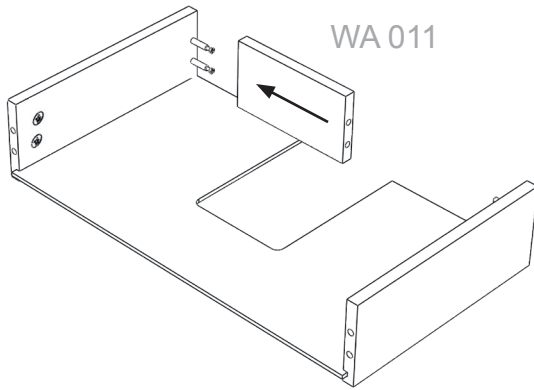


16/30

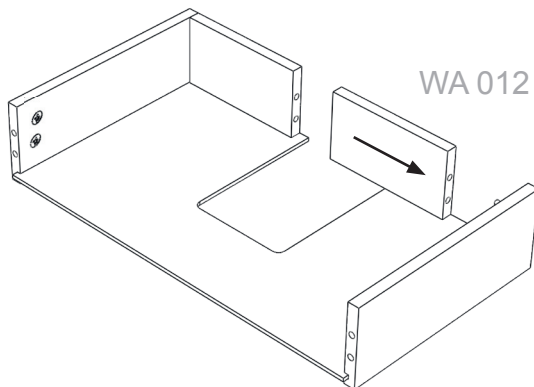


17/30



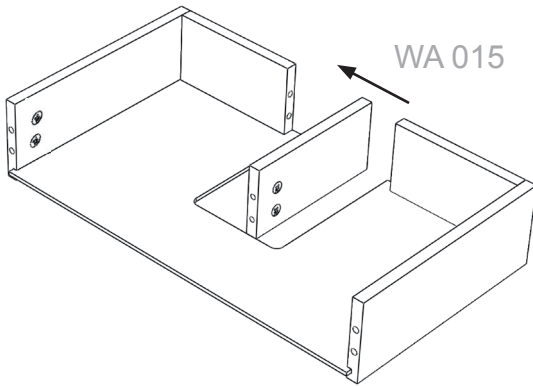


18/30

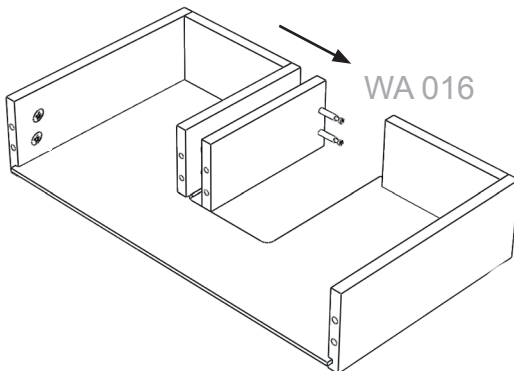


19/30



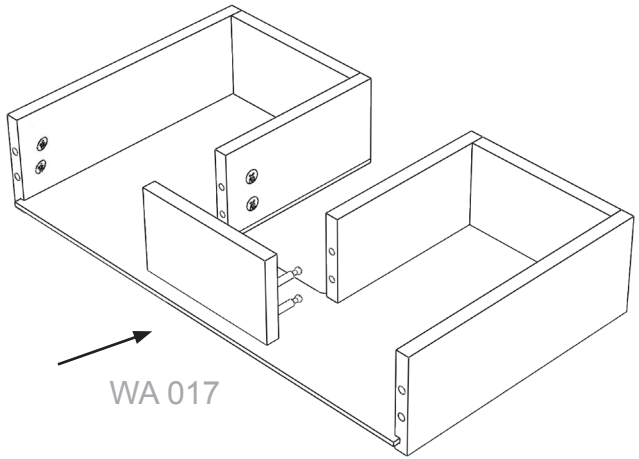


WA 017


20/30




5x  
WA 022



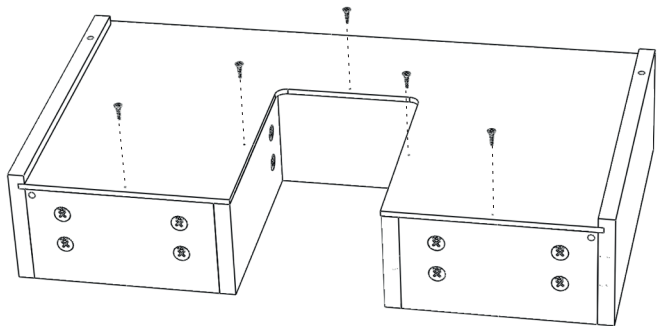



21/30

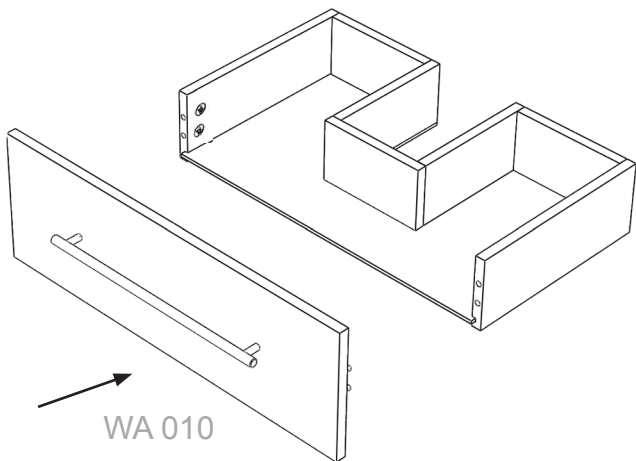


22/30

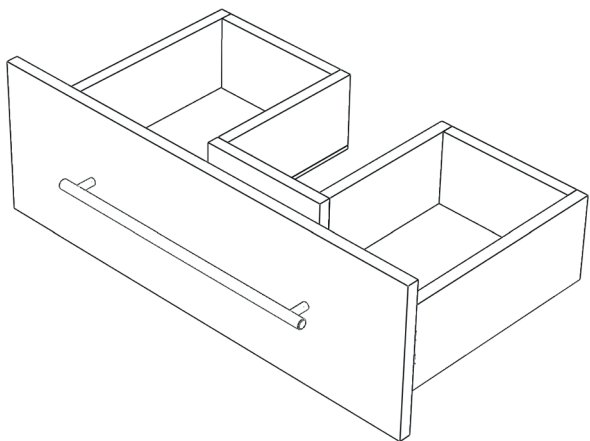

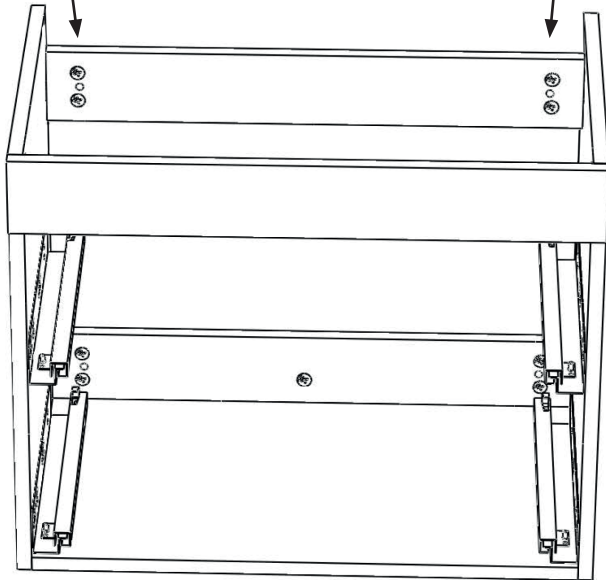


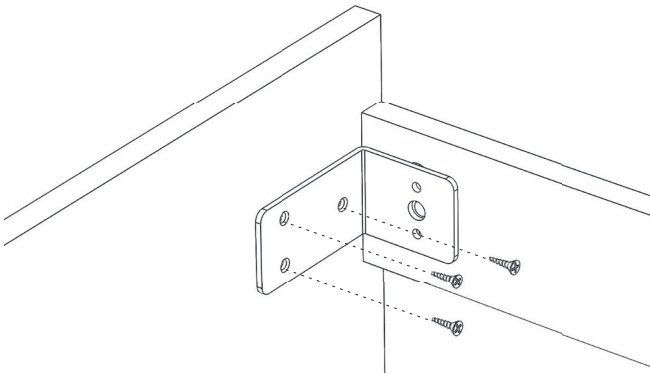


23/30



6x  
WA 022



2x  
WA 028

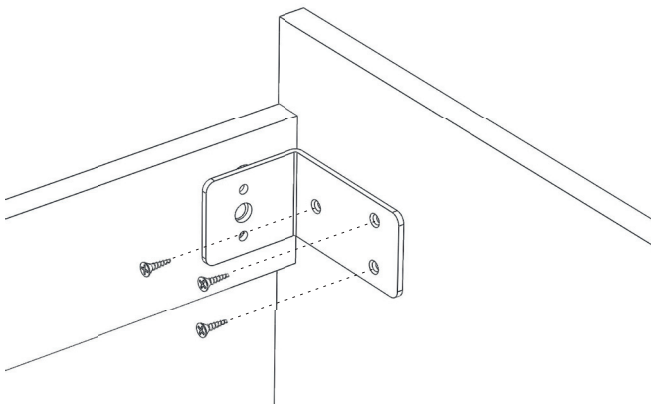

24/30

WANDMONTAGE

WALL MOUNT




MONTAGE AU MUR

DE MONTAJE EN PARED


DUVARA MONTAJ


PAREDE MONTAGEM

لجج رادج

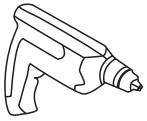


2x  
WA 025

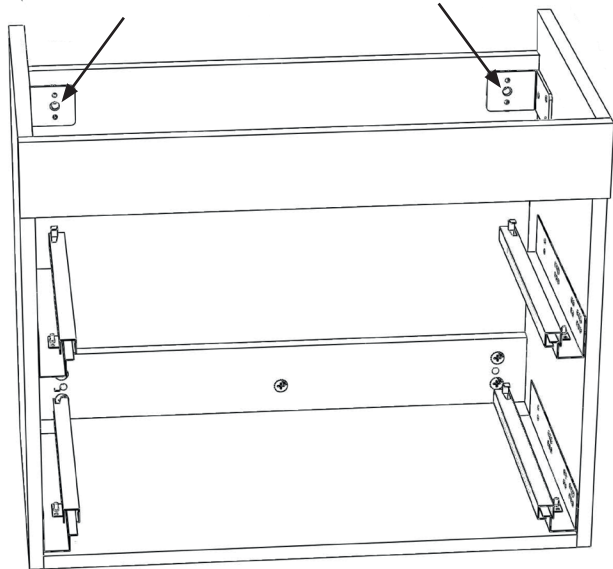

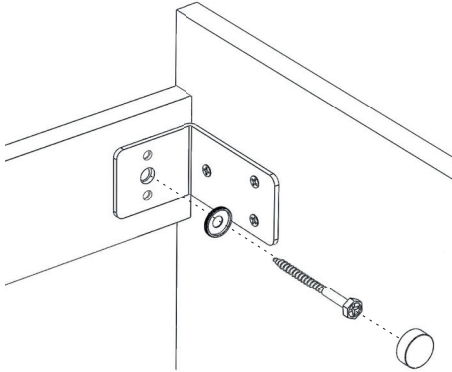

25/30

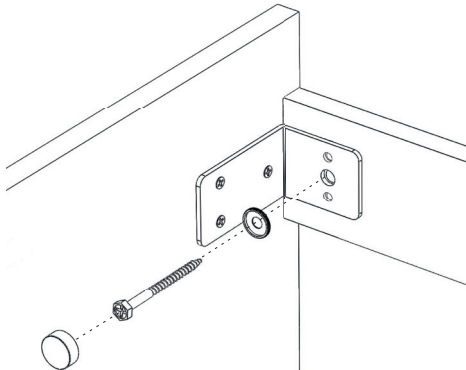

26/30





2x  
WA 024




2x  
WA 026




2x  
WA 027

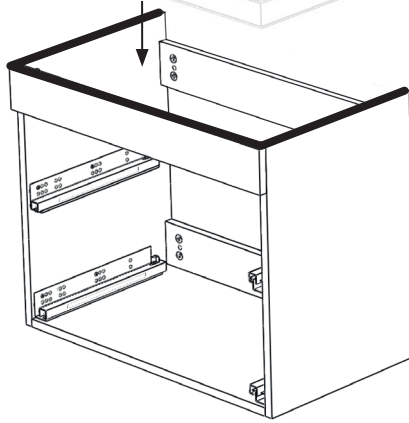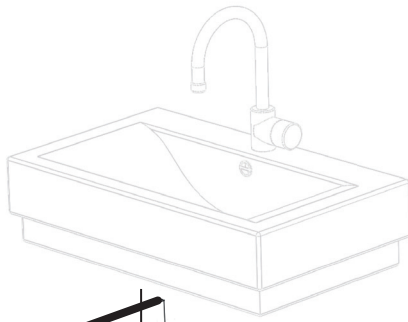

27/30

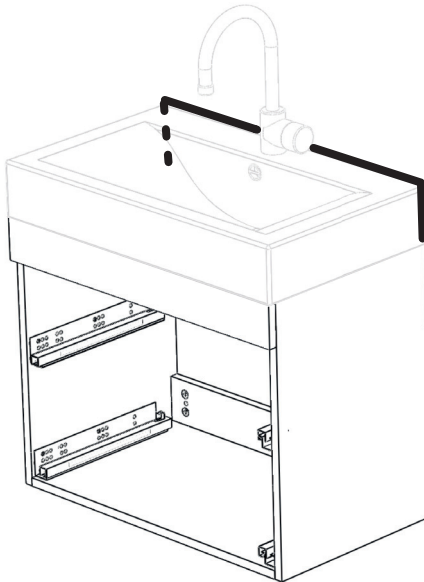

28/30






SILIKON

SILICONE



SILICONA

نوك يلى س



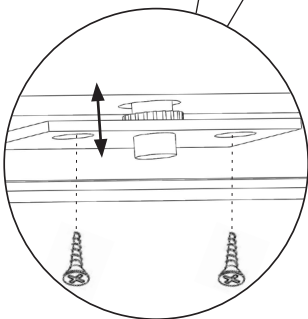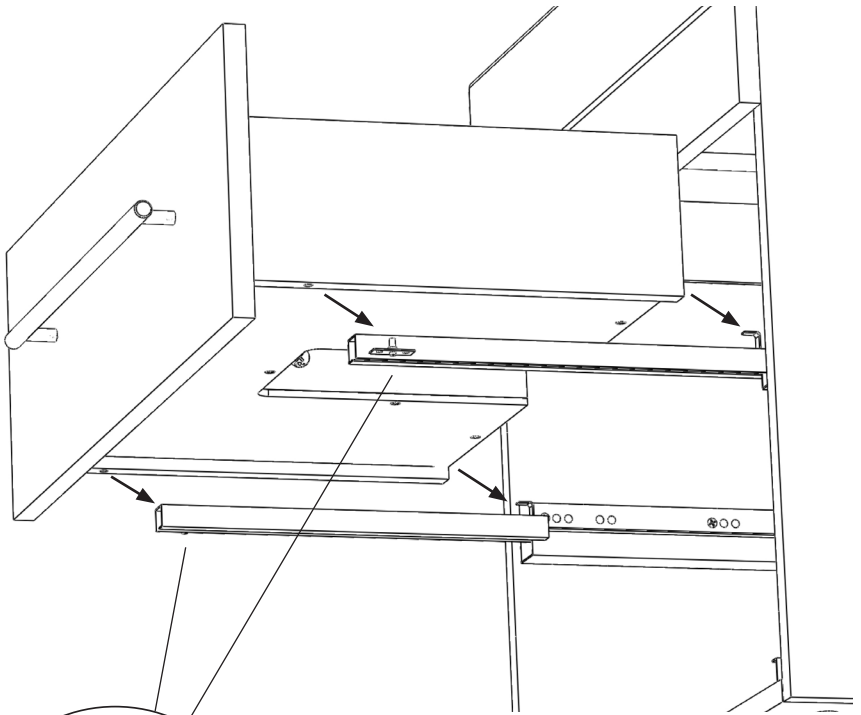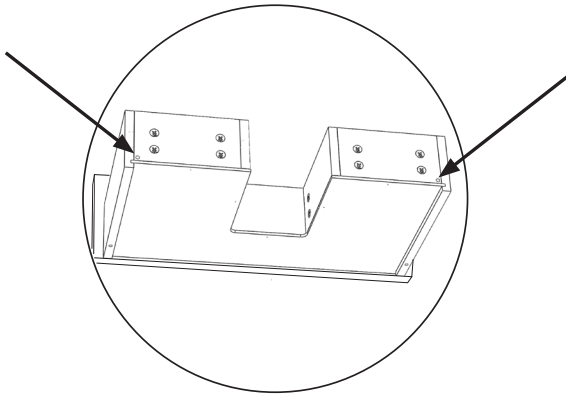

29/30

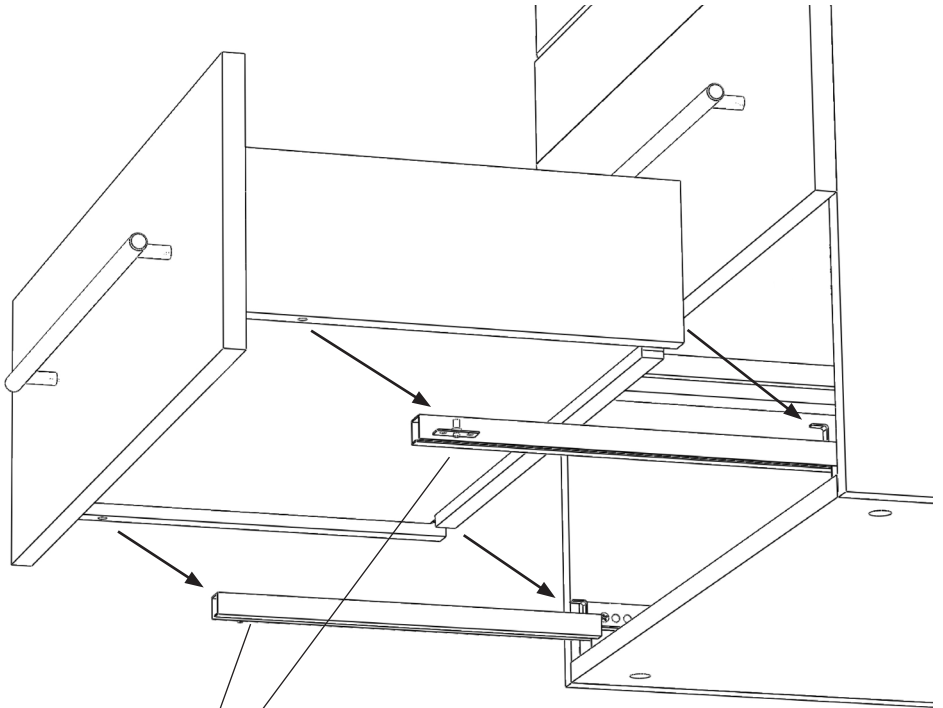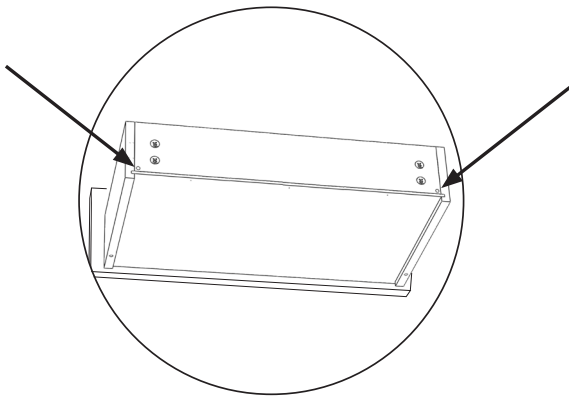

30/30

