

# Installation Instructions


## Hardware(included)

A	
B	
C	
D	


## Tools(don't included)

E	
F	


Step 1 Put some Silicone on the back side

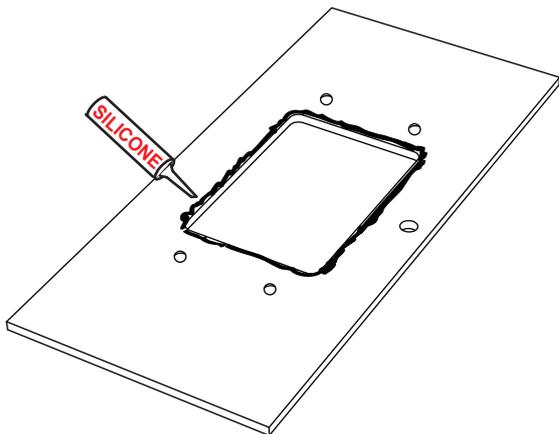


Step 2 Put the basin on the right position

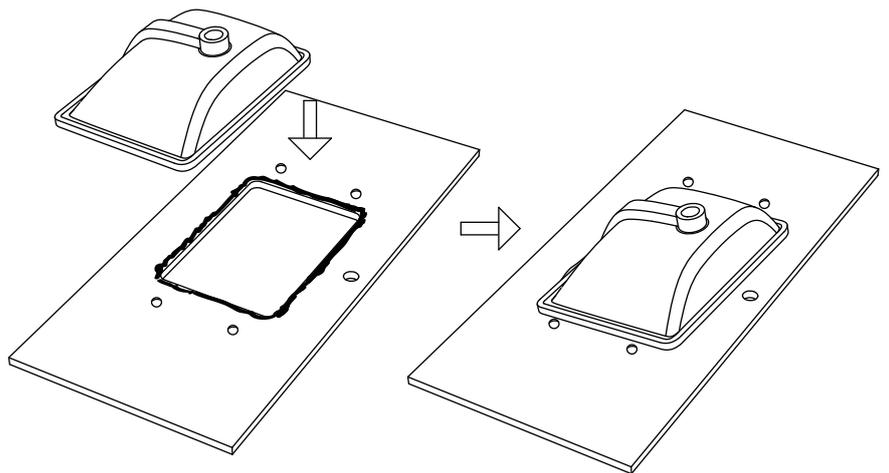

Step 3 Make the A,B,C,D part together and screw the total part

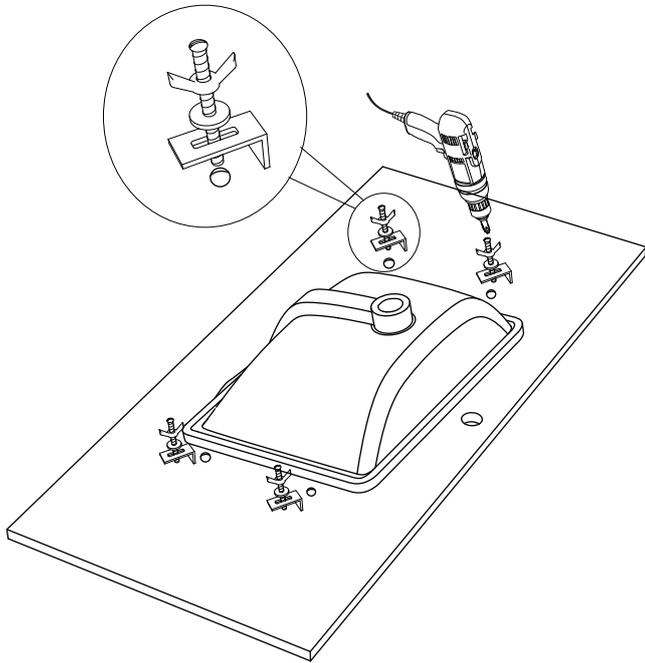

Step 4 Screw the total part on the top and strengthen the part C

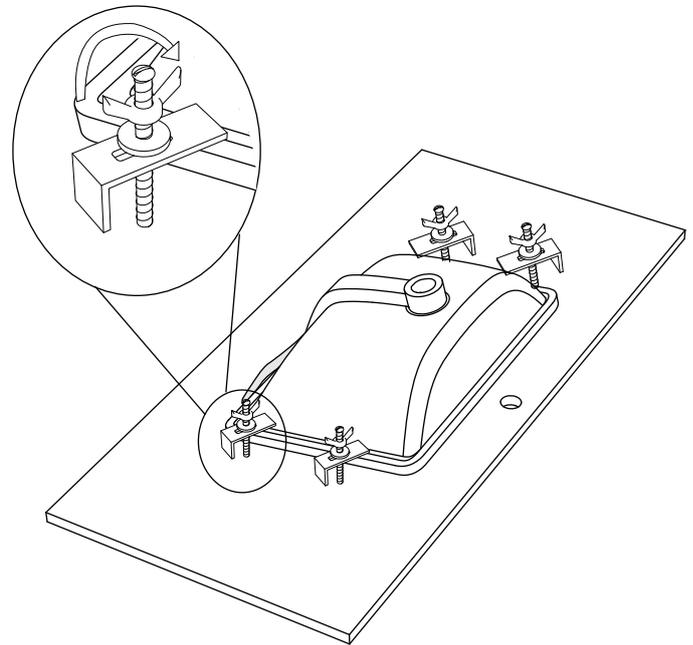

Step 5 Put more silicone around the basin

