

EM00179

AUFBAUANLEITUNG

INSTRUCTIONS MANUAL


LA INSTRUCCIÓN

INTRODUZIONE

TALIMATLAR

INSTRUÇÕES


تاميلعت

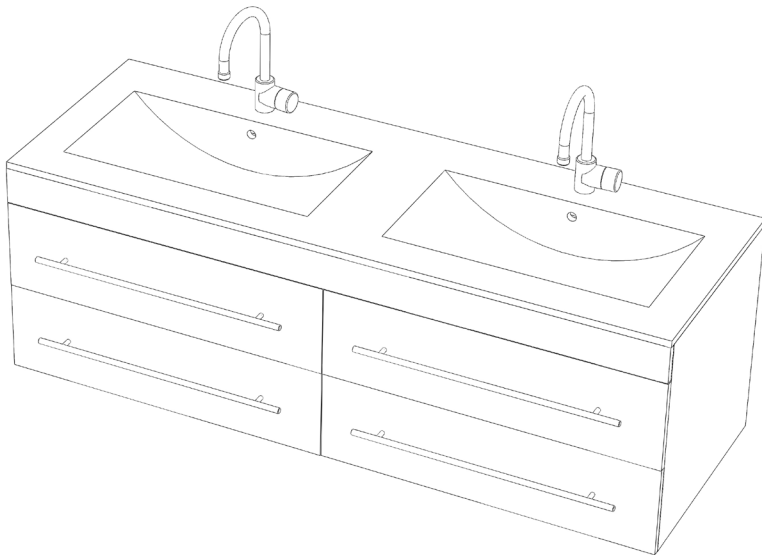



Anleitung zum Einstellen der Schubladen

Tutorials / Tutoriels / Tutoriales

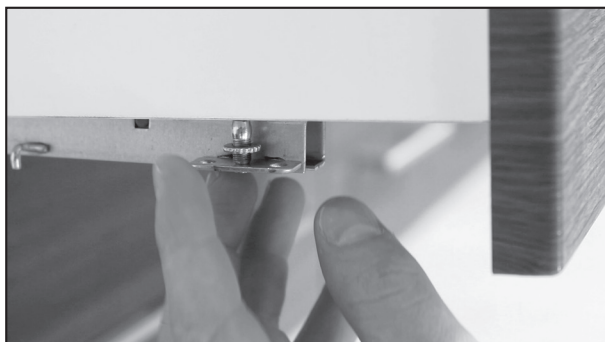


71x
WA 020




71x
WA 021



44x
WA 022




8x
WA 023



16x
WA 024



4x
WA 028

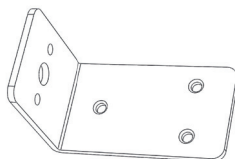


9x
WA 030




24x
WA 031



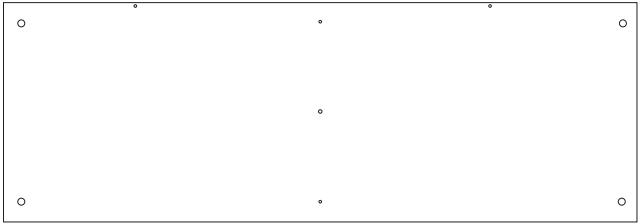


1x

HE 001

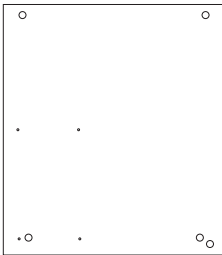


1x

HE 002

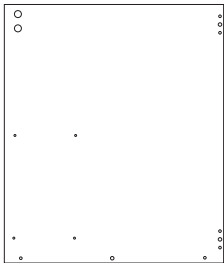

1x

HE 003

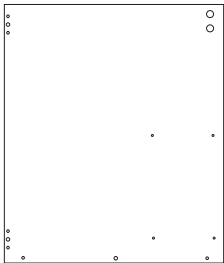


1x

HE 004



1x

HE 005




1x

HE 006




1x


HE 007



2x
HE 008 L




2x
HE 009 R



4x
HE 010




4x
HE 011

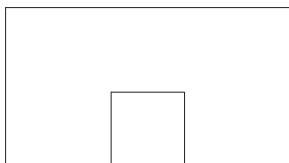

2x
HE 012




2x
HE 013



2x
HE 014



2x
HE 015



2x
HE 016




2x
HE 017




2x
HE 018




2x
HE 019



4x
HE 020




4x
HE 021 L





4x
HE 022 R

71x

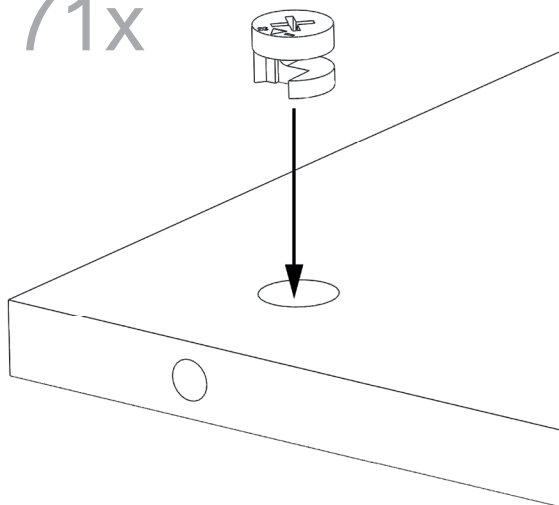




!

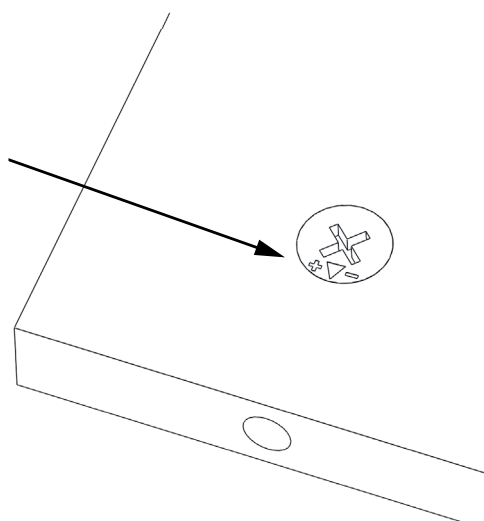



71x



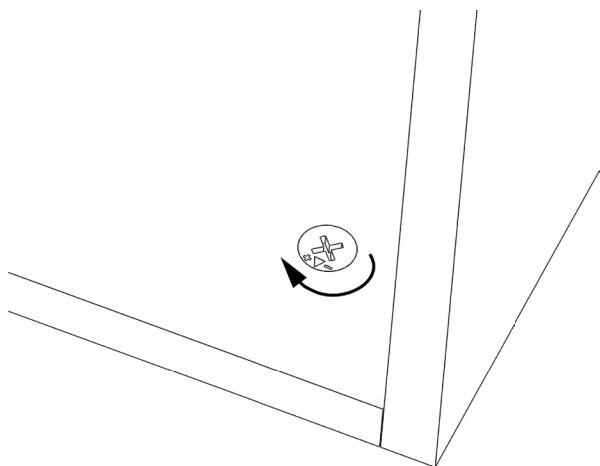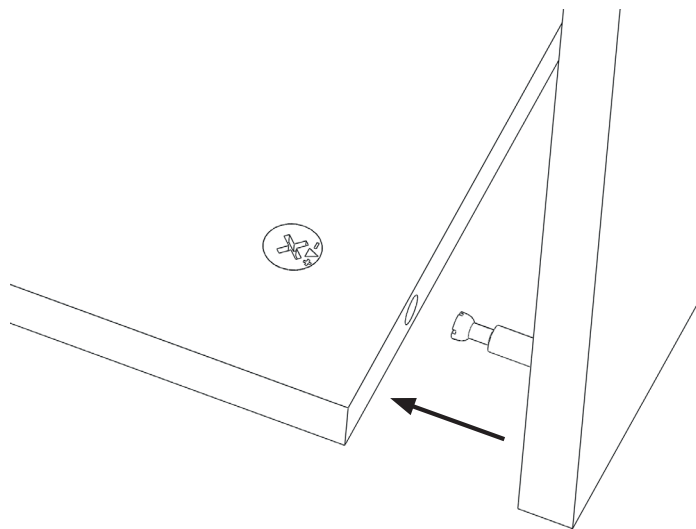

ZUSAMMENBAU

ASSEMBLY

ASSEMBLAGE

ASAMBLEA

MONTAJ


MONTAGEM

تجميع




3x
WA 030


HE 002

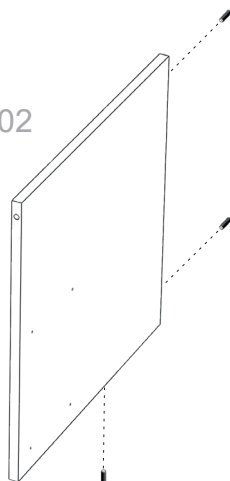

1/42


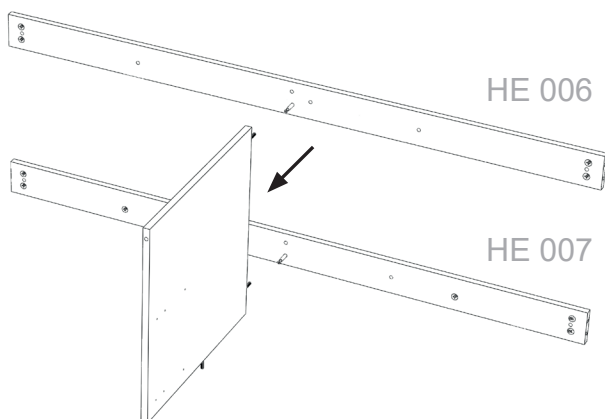


2/42

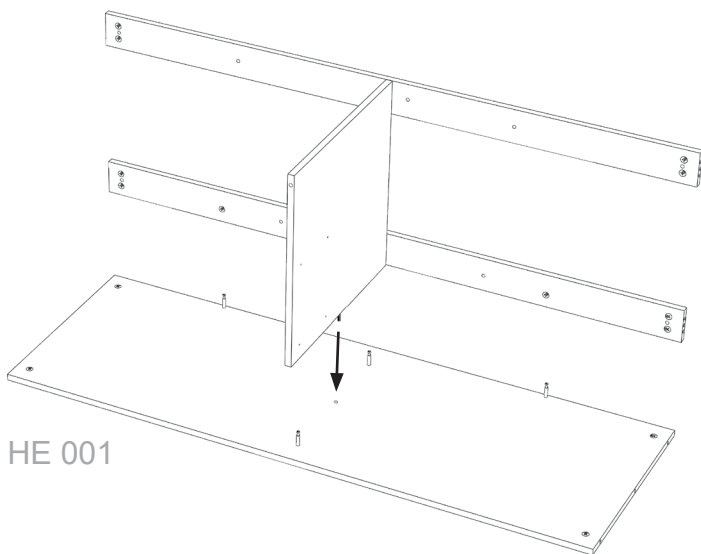


HE 001

3/42

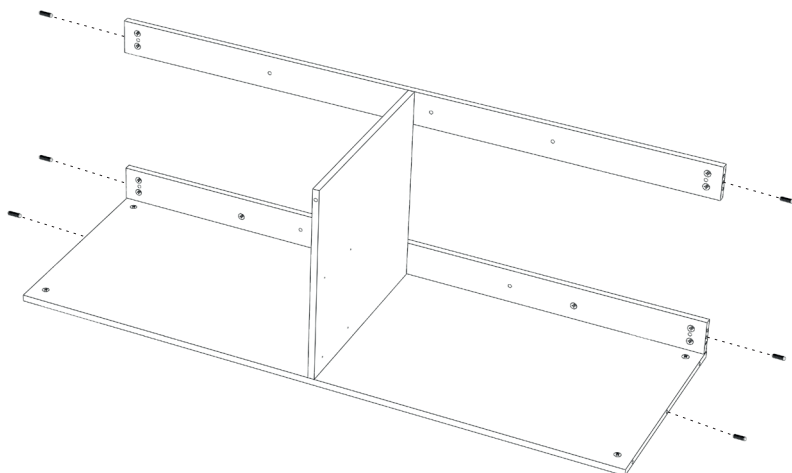


6x
WA 030


4/42



HE 003

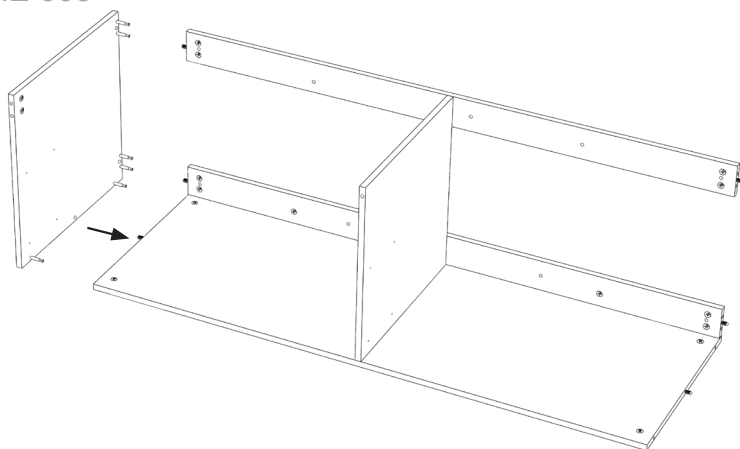


5/42

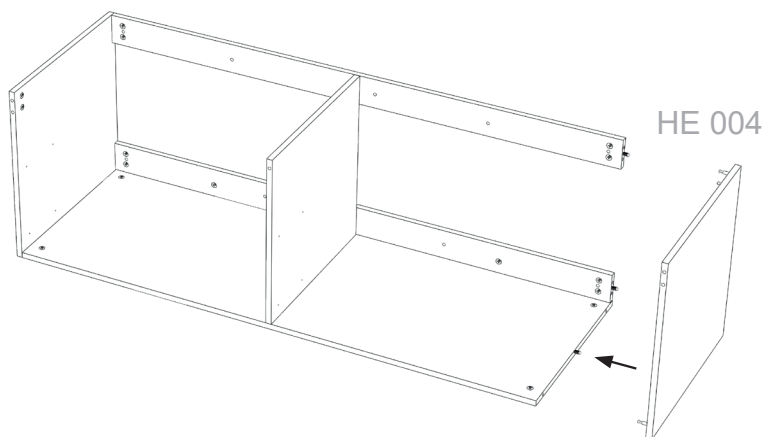


HE 004



6/42

HE 005

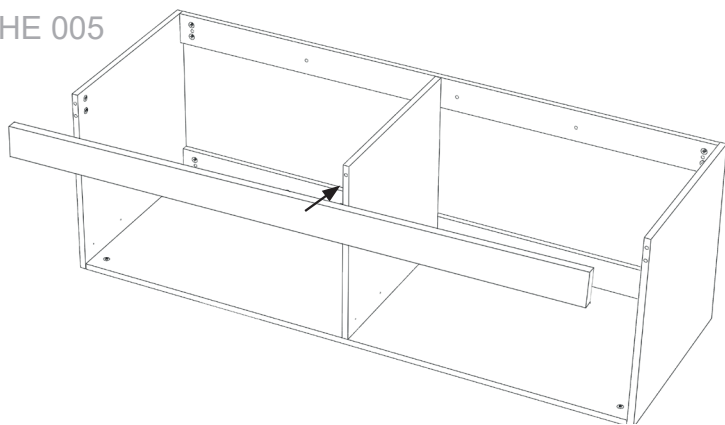


7/42







4x
HE 021 L





4x
HE 022 R




16x
WA 024

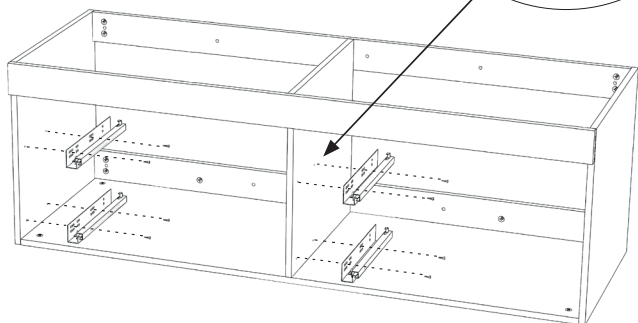
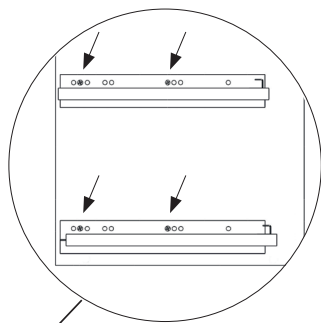


8/42

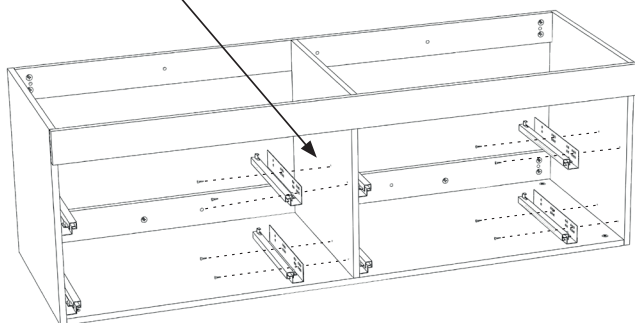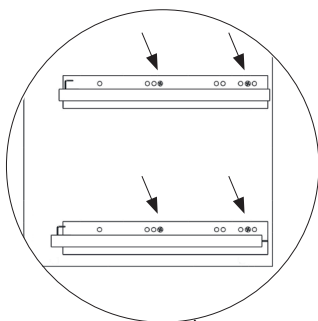


9/42

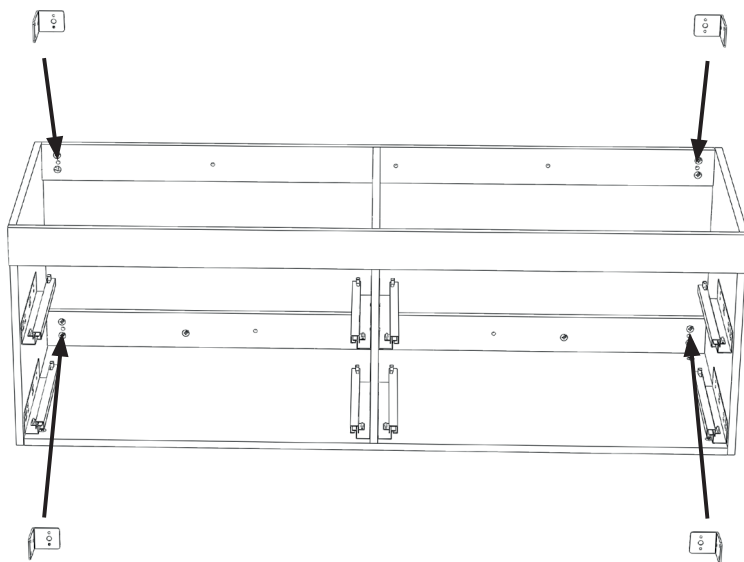





6x
WA 022




2x
WA 028

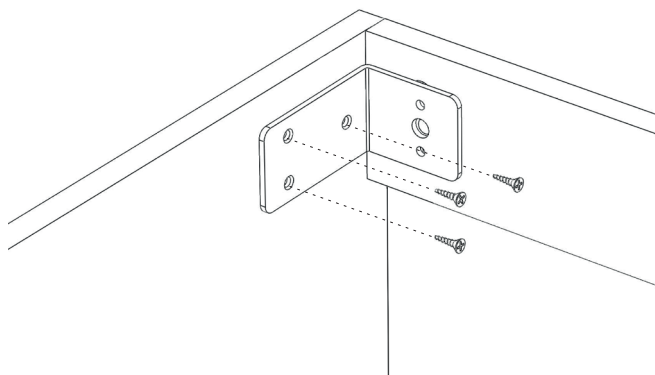


10/42

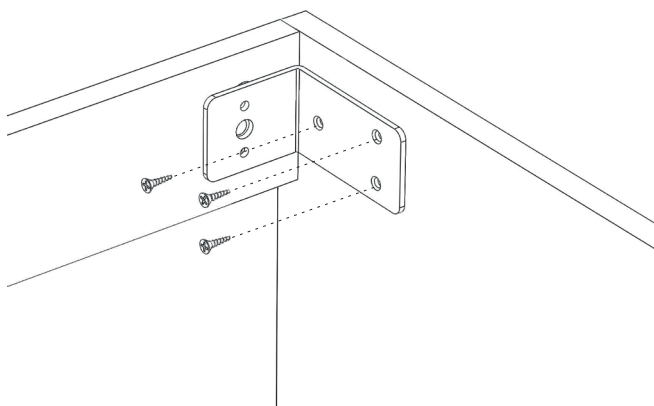



11/42

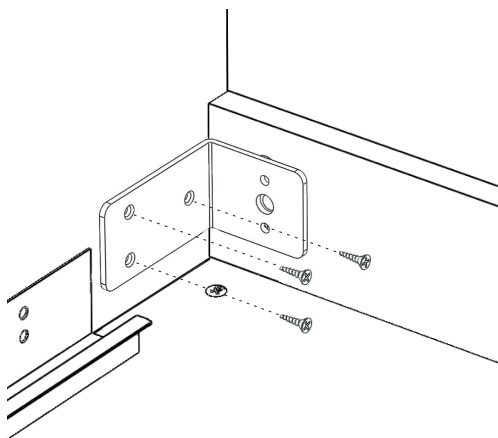


12/42

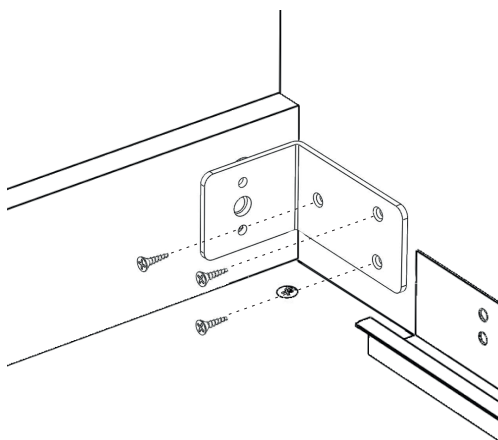


13/42




6x
WA 022




2x
WA 028





8x
WA 023

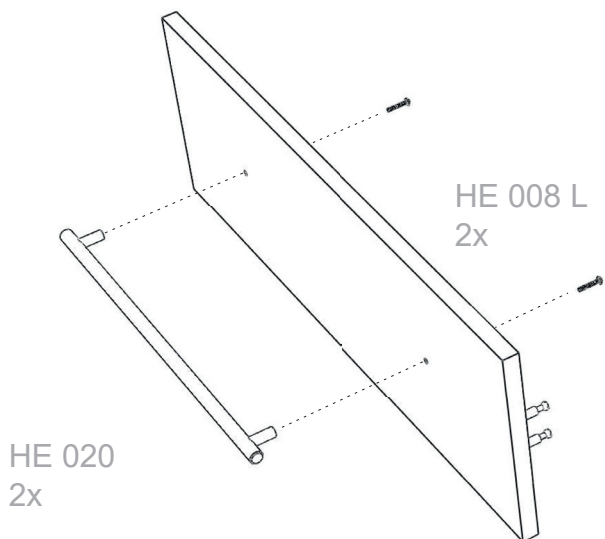


14/42

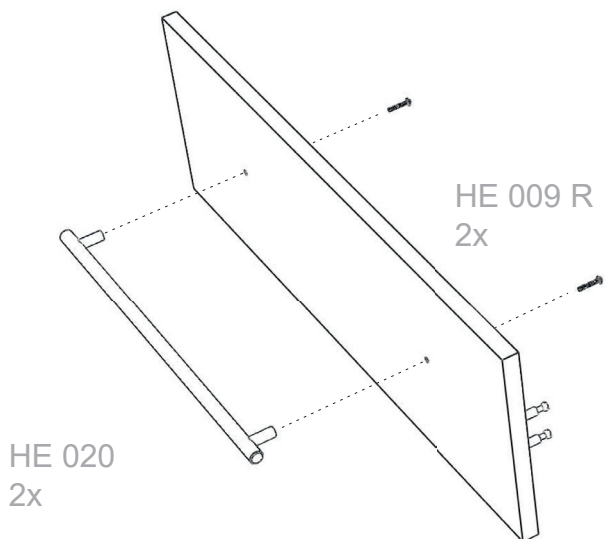


15/42

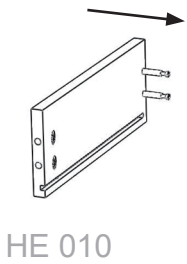


16/42

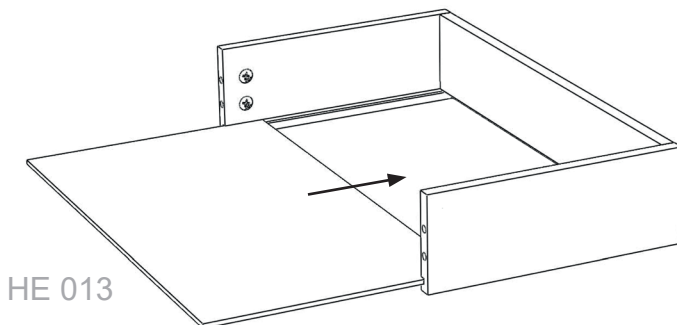

17/42




3x
WA 022

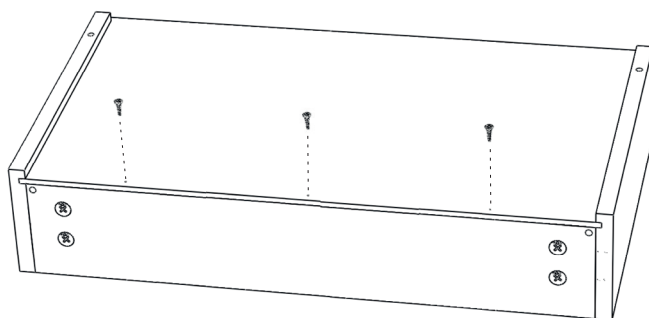


18/42



HE 008 L

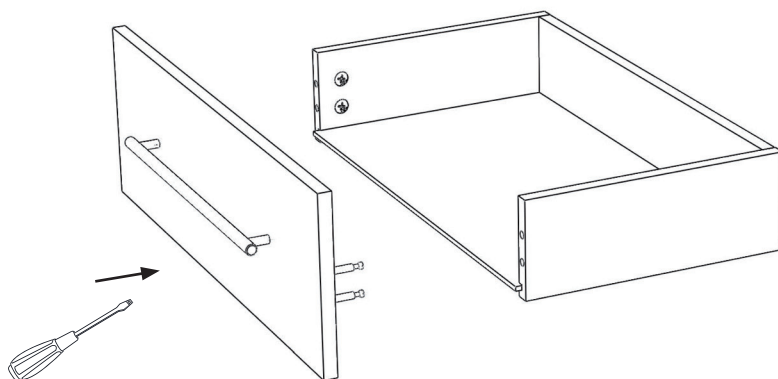


4x
WA 031

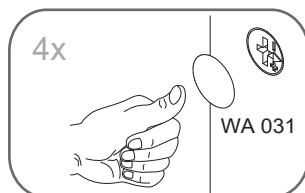


19/42

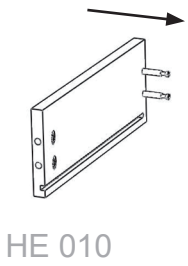


20/42

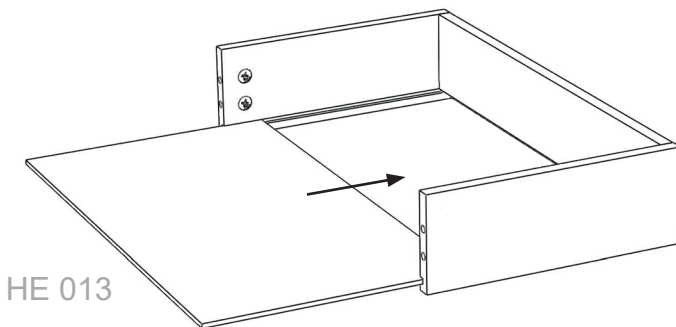

21/42




3x
WA 022

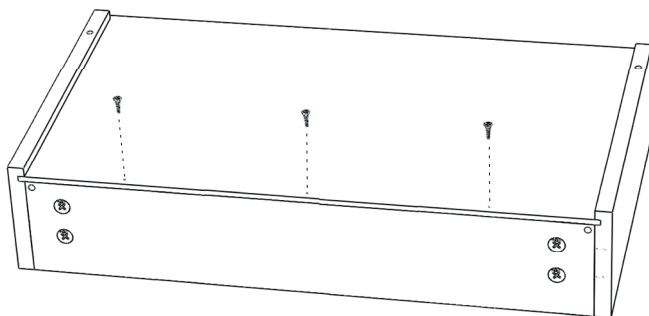

22/42

HE 009 R

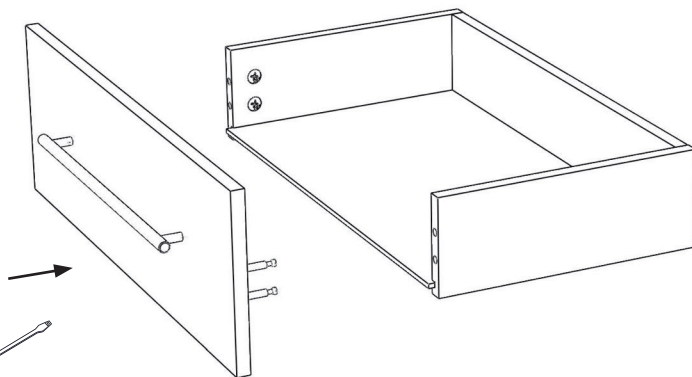


4x
WA 031




23/42


HE 010

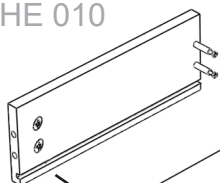

HE 012

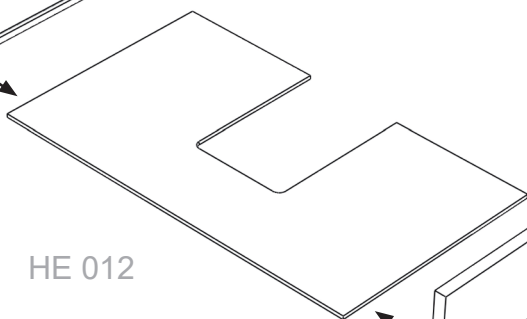


HE 011

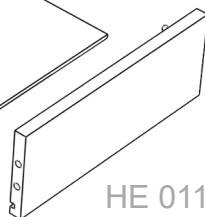


24/42




HE 014

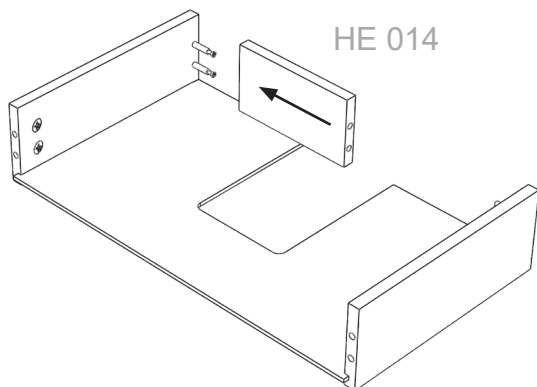


25/42

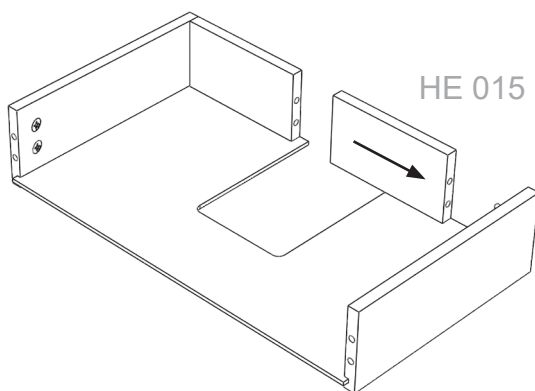


26/42

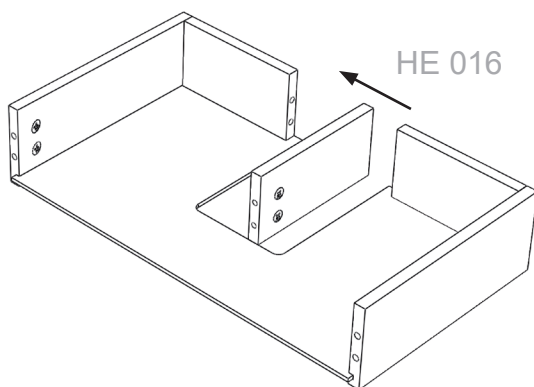

27/42

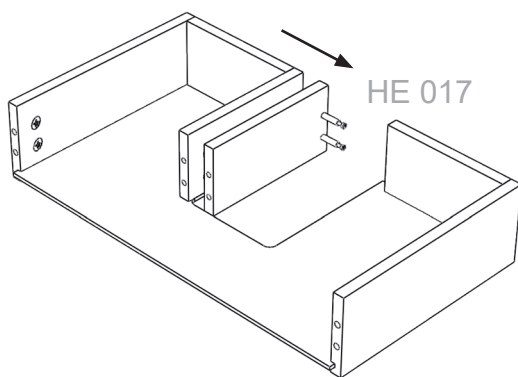




28/42

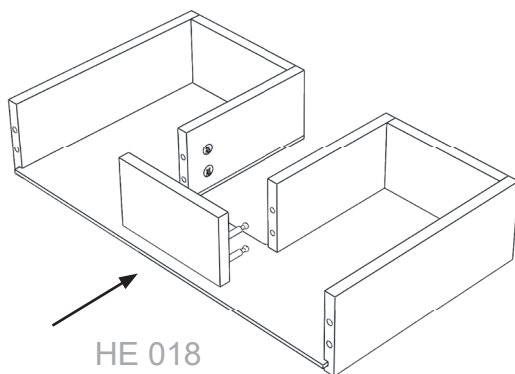


HE 018

29/42







5x
WA 022

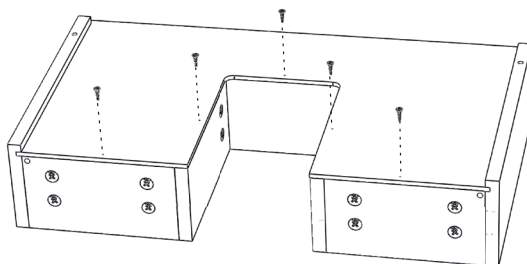


30/42

HE 008 L

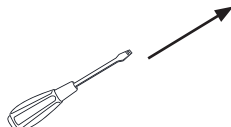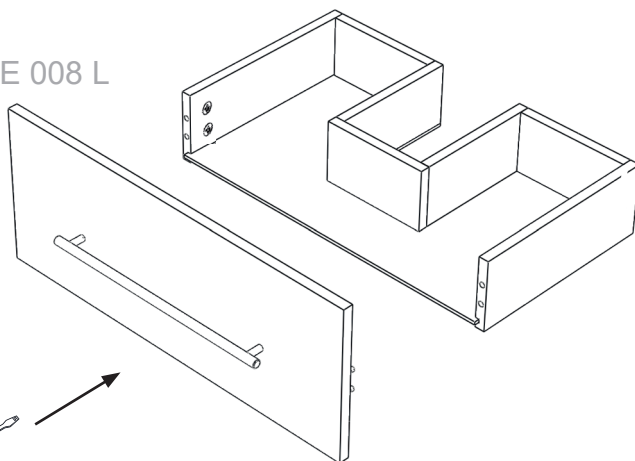


8x
WA 031

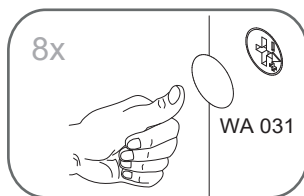


31/42


HE 010

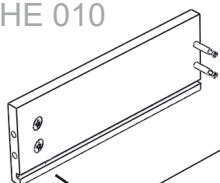

HE 012

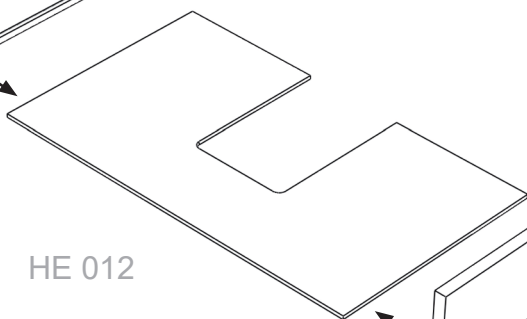


HE 011

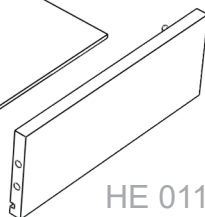


32/42




HE 014

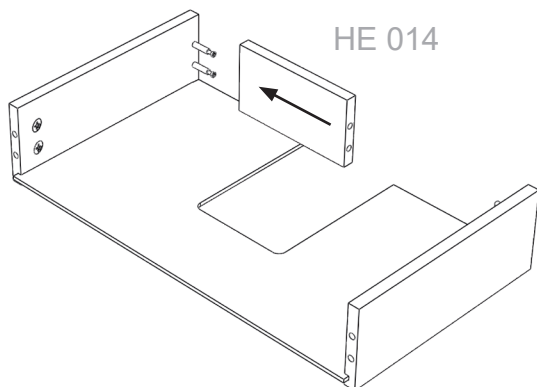


33/42

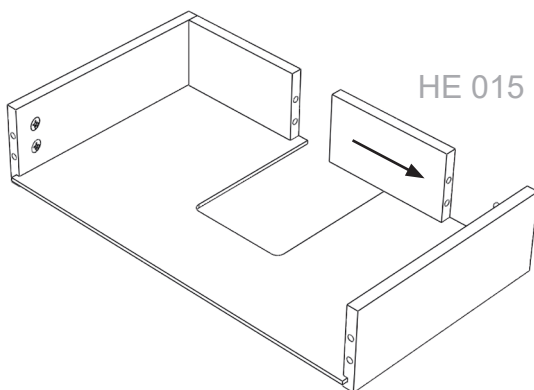


34/42

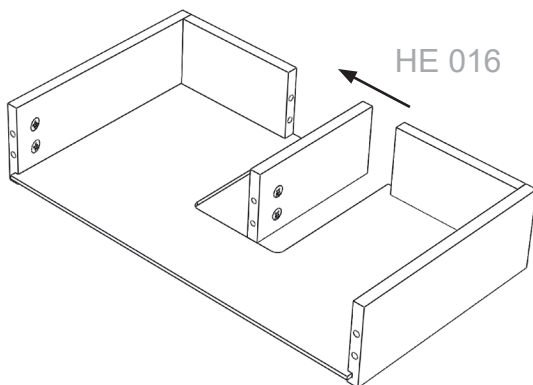

35/42

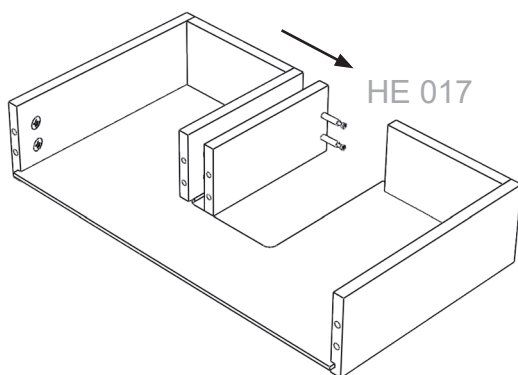



36/42

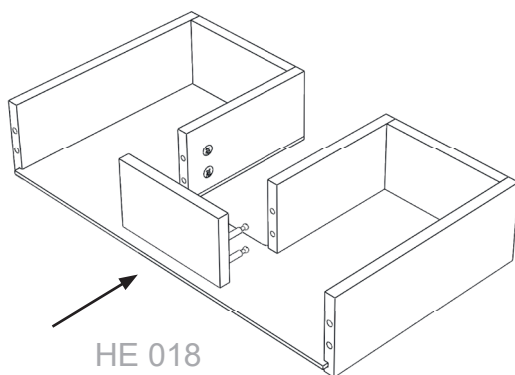


HE 018

37/42







5x
WA 022

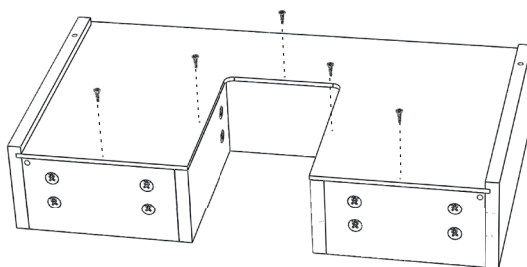


38/42


HE 009 R

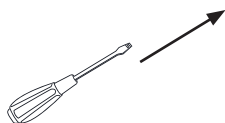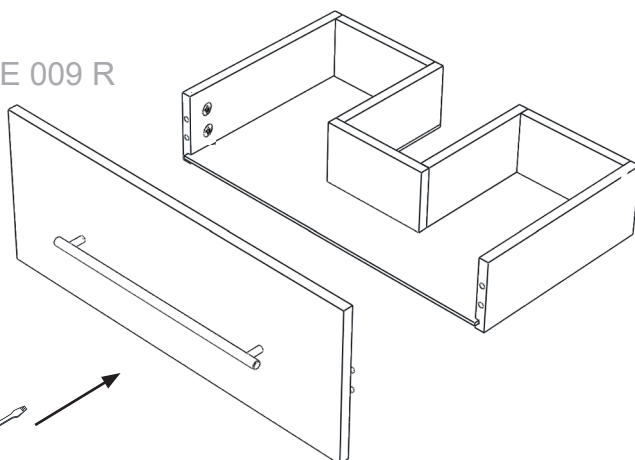



8x
WA 031

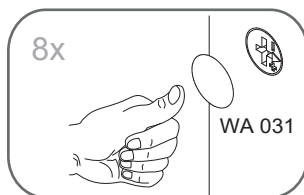

39/42

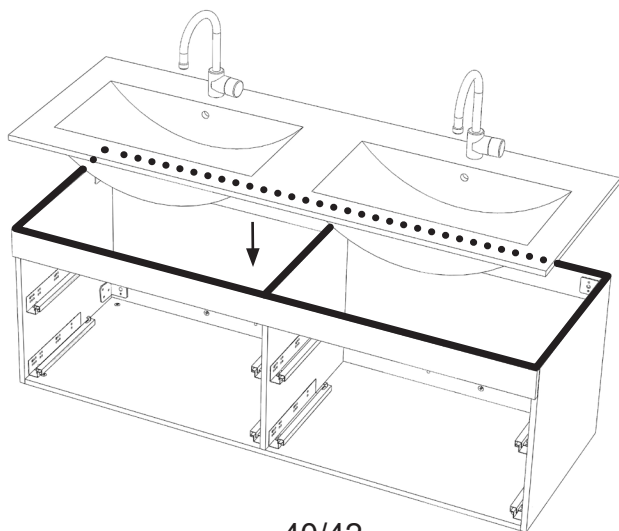

40/42

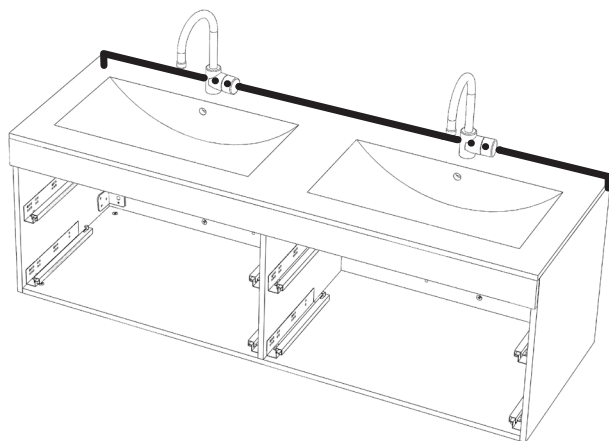


SILIKON



SILICONE




SILICONA

نوڭىلىس

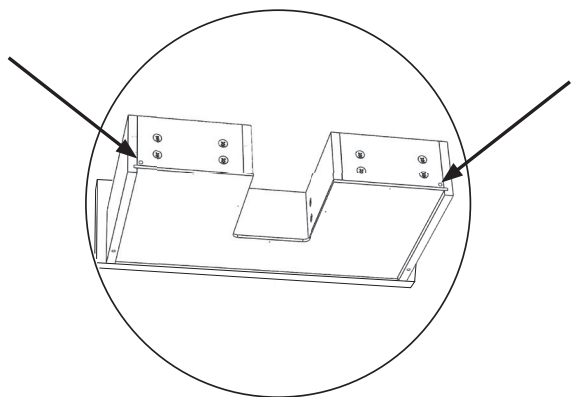

HE 009 R

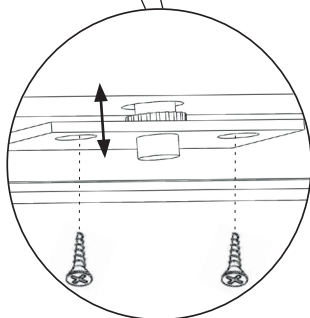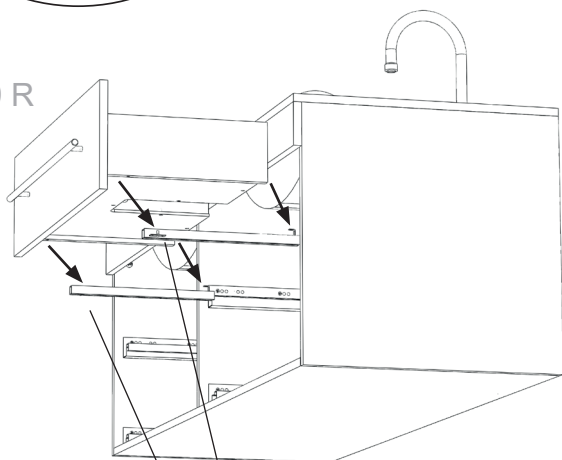

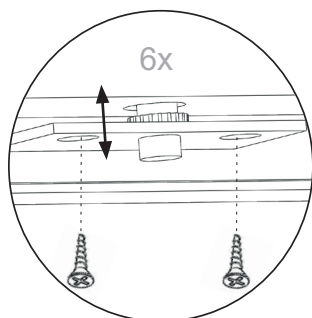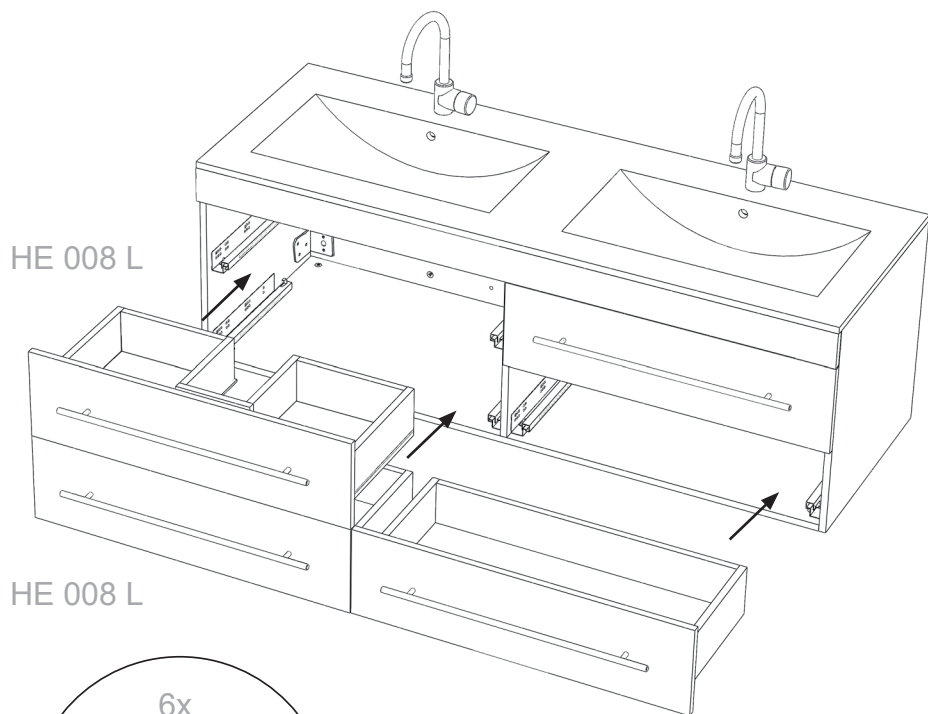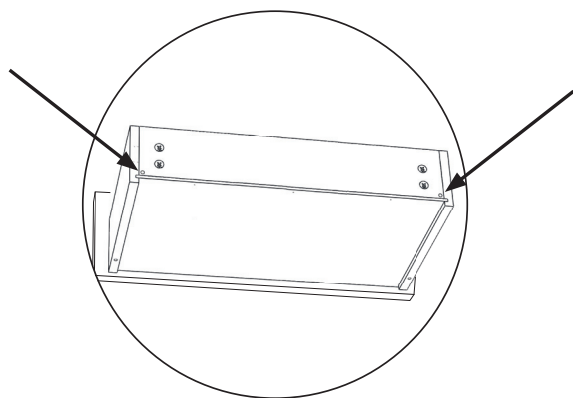

HE 009 R